

# Technology Room Operation Manual

For assistance, call: 554-3079, 554-3538  
or visit: RH 407

1. Press **POWER** button  
to turn on the computer

2. To use the floppy disk,  
insert disk to **Floppy drive**

3. To play CD/DVD,  
use **CD/DVD drive**

4. To play VHS tape or DVD  
**Power** on **VCR/DVD**  
Insert the tape or DVD  
Press **DVD** or **VIDEO** button  
Use **Control Buttons** to navigate

5. Use front USB ports for  
flash drives/memory sticks

